

Installation of sterilizer AS - 9W in canister filter Unimax 250



PRODUCT	FOR
AS 5W Sterilizer	Unimax 150
AS 9W Sterilizer	Unimax 250, 500
AS 11W Sterilizer	Unimax 700



Take the filter and UVC lamp out of the packaging



These parts of the UVC lamp will not be needed



Open the filter and take out all media containers and flow cover



Remove the plug from the bottom of the filter container by unscrewing it



Take the socket out of the lamp tube



Take the gasket (oring) off the filter container plug and put it on the UVC lamp tube (regards the old version – in new models the lamp is already equipped with oring)



Put the gasket on the UVC lamp tube



Press it in the groove



The plug will not be needed – you can put it to the needless parts



Put the flow cover on the UVC lamp tube

11



Put it from the top of the lamp tube

12




Put the UVC lamp tube with the flow cover inside of the canister, setting it like on the picture

13



Pushing it inside, turn counterclockwise

14

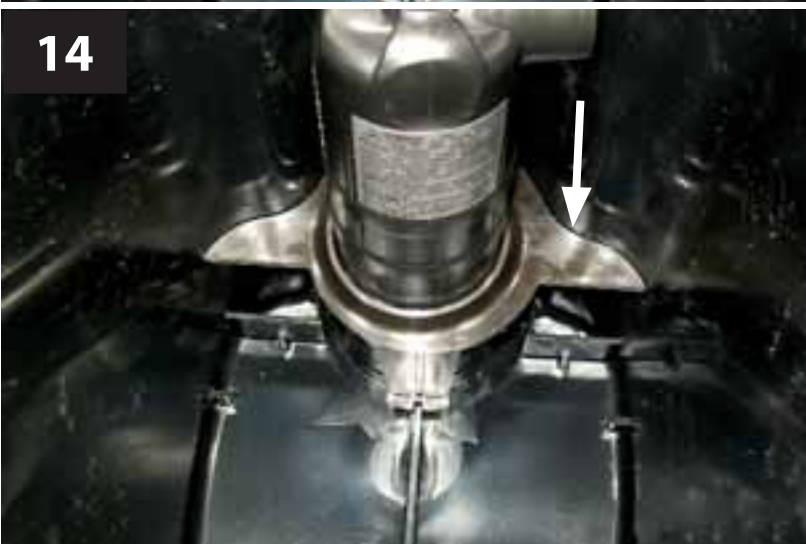

After installing UVC tube, move the flow cover towards the bottom of the container

15



Put in all media containers

16



After putting the containers, close the filter

17



In the bottom of the container there is visible part of the lamp tube and quartz glass

18



Put the light bulb out of the packaging and install it in the UVC lamp socket

19



Install the light bulb in the UVC lamp socket

20



Put the socket into the UVC lamp tube from the outside of the filter container

21



Tighten up to form a triangle of the socket and quartz glass

22



After turning the power on, UVC lamp operation will be visible through the lamp tube and on the plug there will be a red diode on

